

# Roller Block Quick Start

## Basic Ratings


---



### Inner Roller Position

---

Load Rating	600 lb
	273 kg
Min Diameter	1-5/8 in
	41 mm
Max Diameter	3-3/4 in
	95 mm

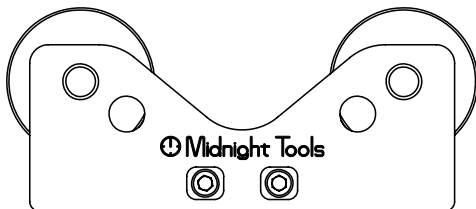

### Outer Roller Position

---

Load Rating	600 lb
	273 kg
Min Diameter	3-1/2 in
	89 mm
Max Diameter	6 in
	152 mm

# Change Roller Position

---

- (1) Fully loosen both 1/4-20 socket head cap screws using a 3/16 hex key
- (2) Remove the side plate containing the lock nuts
- (3) Move the dowel pins and rollers to the desired position
- (4) Reinstall the side plate with the lock nuts
- (5) Insert the 1/4-20 socket head cap screws and tighten

## Support

---

If you need additional support or information please visit  
[www.midnighttools.com](http://www.midnighttools.com).

